

# Pneumatic Back Tattooer

## Manual Instruction

### Description:

- Made of aluminium, stainless steel & brass
- 1 row of 5 mm characters, 8 possibilities for alphabet or numeric letters
- The character holder is connected to a piston which is acted by a source of compressed air
- **6 to 7 kg** pressure is required, depending on piglet's age : 6 kg at 1 week up to 7 at 3-4 weeks age

### Characters installation:

- Hold the tattooer in your left hand (quick connector down) & take-off the steel carter
- Then look at the character holder => the small mark has to be farrest from you
- Take-off the right screw with an appropriate screw-driver
- Insert the first character, then the others => just think that the first you insert is the first you read when it's tattoo on the pig's back
- Put-on the screw to block all those characters and re-install the steel carter => don't forget washers and tight well those black screws
- The tattooer is ready to work

### Utilisation:

- Connect the tattooer to the source of compressed air with the quick connector => **check that the minimum pressure is over 6 kg & that there's no pressure lost**
- Put some ink on the inker : we do recommend to use only Raidex trade mark which is actually the thicker one available on the market
- First you act the gachette in order to see characters at the extreme part of the steel carter => dip needles in the ink and release the gachette
- Hold a piglet, put the steel carter on its back => the best place is parallel to the spine just after the shoulder (see pictures)
- Maintain the carter firmly when acting the gachette => needles are supposed to goes out of the carter to tattoo
- Don't release the gachette in order to dip needles in the ink for the second piglet and so on => we do recommend to ink between each piglet for a better result

### Maintenance:

- After you're finish to tattoo, you've to clean-up your tattooer with hot water and soap and a brush => the cleaner is the tattooer the better it could work next time
- Then dry it a bit and put some droplets of hydraulic oil inside the quick connector => act the piston 5 to 6 times in order to send the oil inside and lubricate the piston's washer

### Warranty:

- One year warranty from the purchase date
- **The warranty doesn't work when the tattooer isn't proper used,**



**Cimac Élevage**

5, rue Irène Joliot-Curie / F-22440 Ploufragan

Tél. : +33296765822 / Fax : +33296765823

Messagerie : [yannick@cimacelevage.fr](mailto:yannick@cimacelevage.fr)

©CimacÉlevage200509